

AndyMark 6" Plaction Wheel w/ Roughtop Tread (am-0437) Assembly Instructions

June 2012



Parts needed to make a 6" Plaction Wheel:

Tool needed:

Component	Qty.	Part #
6" Plaction Wheel Halves	2	N/A
#10-32 x 1" SHCS	6	am-1192
#10-32 Nylock Nuts	6	am-1212
6" Wheel Roughtop Tread	1	am-0523
Alligator Clips	2	am-0894
Alligator Pins	1	am-0894

$\frac{3}{16}$ " Allen wrench

6" Plaction Wheel Assembly Instructions:


Step 1: Take one of the 6" Plaction wheel halves and place it on a table so the inner part is shown.



Step 2: Slip in the 6" Wheel Roughtop Tread. Snap the second 6" Plaction wheel half, making sure the pins and slots align.



Step 3: Place a #10-32 Nylock Nut on one half, and tighten its corresponding #10-32 x 1" SHCS on the other wheel half.

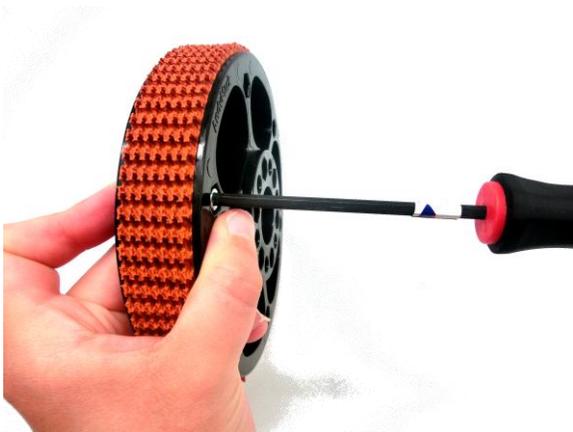

Step 4: Repeat step 3 until all the outer holes have a #10-32 Nylock Nut with its corresponding #10-32 x 1" SHCS.

