

AndyMark 8" Plaction Wheel w/ Roughtop Tread (am-0513) Assembly Instructions



June 2012

Parts needed to make an 8" Plaction Wheel:

Tool needed:

Component	Qty.	Part #
8" Plaction Wheel Halves	2	N/A
#10-32 x 1" SHCS	6	am-1192
#10-32 Nylock Nuts	6	am-1212
8" Wheel Roughtop Tread	1	am-0523
Alligator Clips	2	am-0894
Alligator Pins	1	am-0894


$\frac{3}{16}$ " Allen wrench

8" Plaction Wheel w/ Roughtop Tread Assembly Instructions:

Step 1: Take one of the 8" Plaction wheel halves and place it on a table so the inner part is shown.



Step 2: Slip in the 8" Wheel Roughtop Tread.

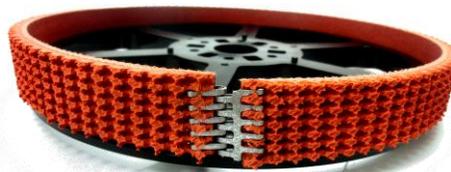

Step 3: Snap the second 8" Plaction wheel half, making sure the pins and slots align.



Step 4: Place a #10-32 Nylock Nut on one half, and tighten its corresponding #10-32 x 1" SHCS on the other wheel half.



Step 5: Repeat step 4 until all the outer holes have a #10-32 Nylock Nut with its corresponding #10-32 x 1" SHCS.

