



FTC Field Perimeter

(AM-0481a)


Assembly Guide

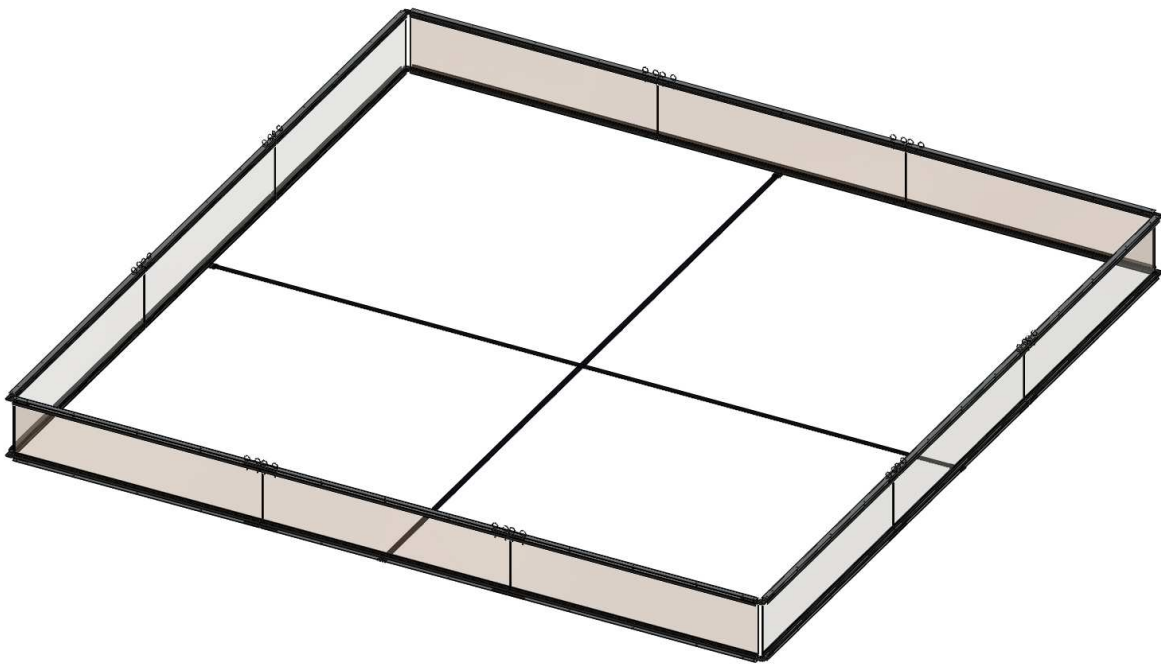


Step 1: Take the panels that are attached at one end and unfold them to their stop at 90 degrees for the corner.

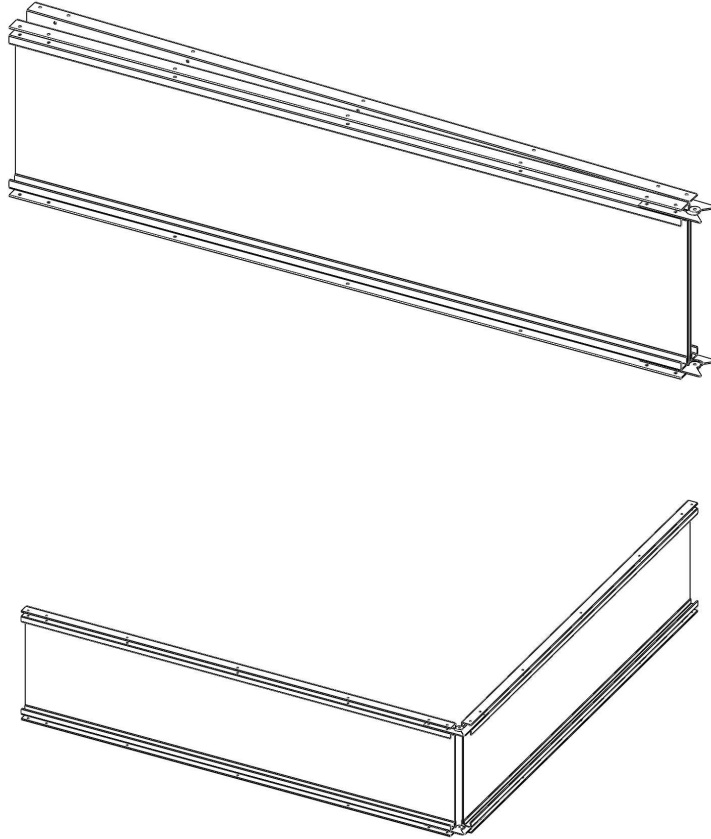


Step 2: At the end of each panel insert and align the rail link with the 2 holes in the panel and insert the pins. Repeat this step for the bottom of the panel.

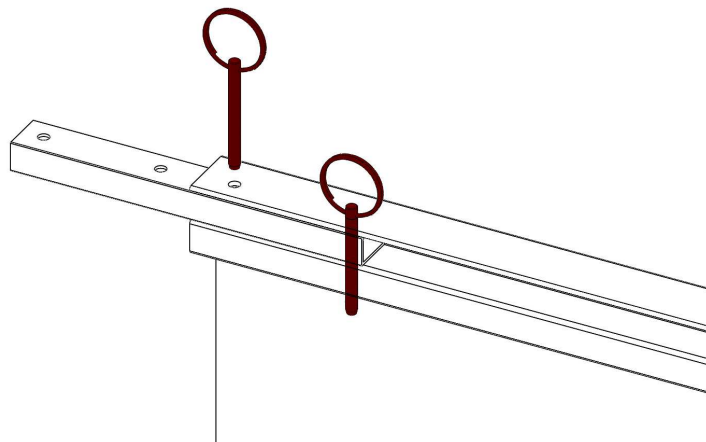


Step 3: Take one of the single panels and attach it to the rail link by sliding it over the rail link and inserting the pins. When attaching make sure the panels are facing the same direction.

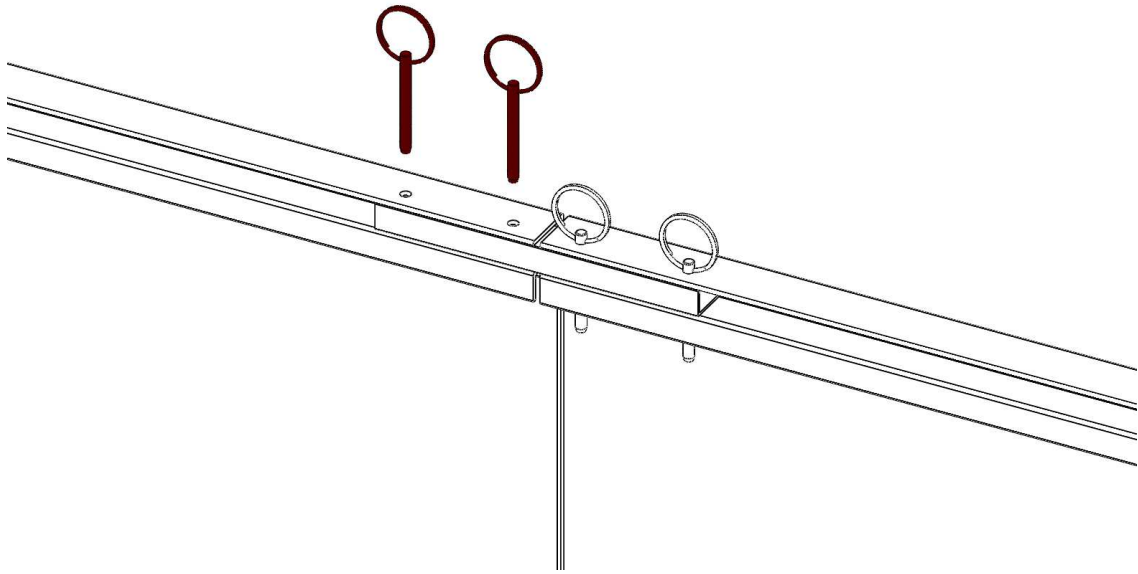


Step 4: Unfold another corner panel and attach it to the single panel in the same manner as before. Ensure the panels face the same direction and at this point it should be in the shape of a U.

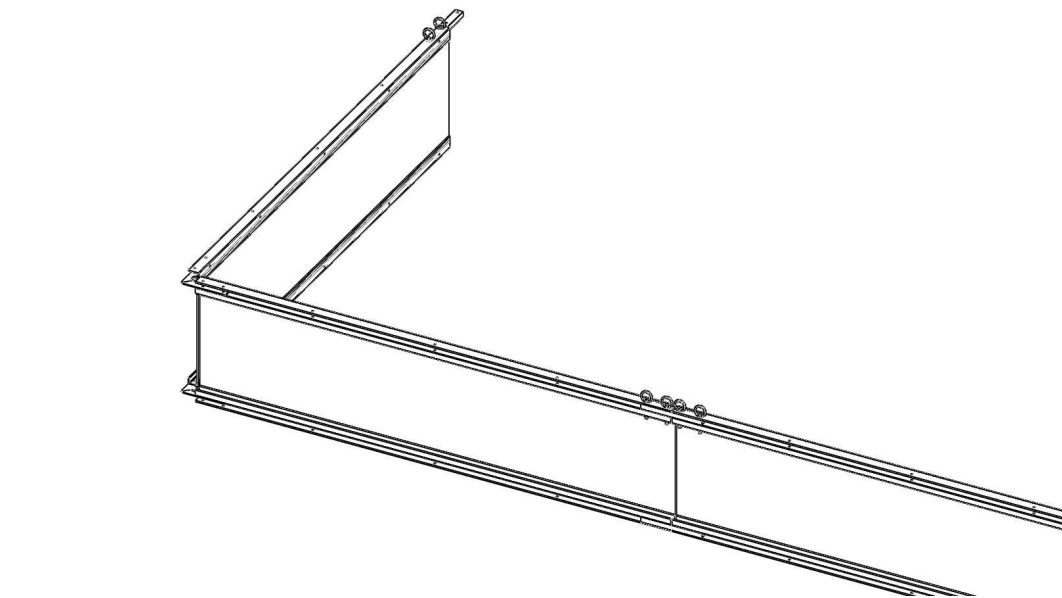

Step 5: Repeat the previous steps until the field is the shape of a square and resembles the picture below.

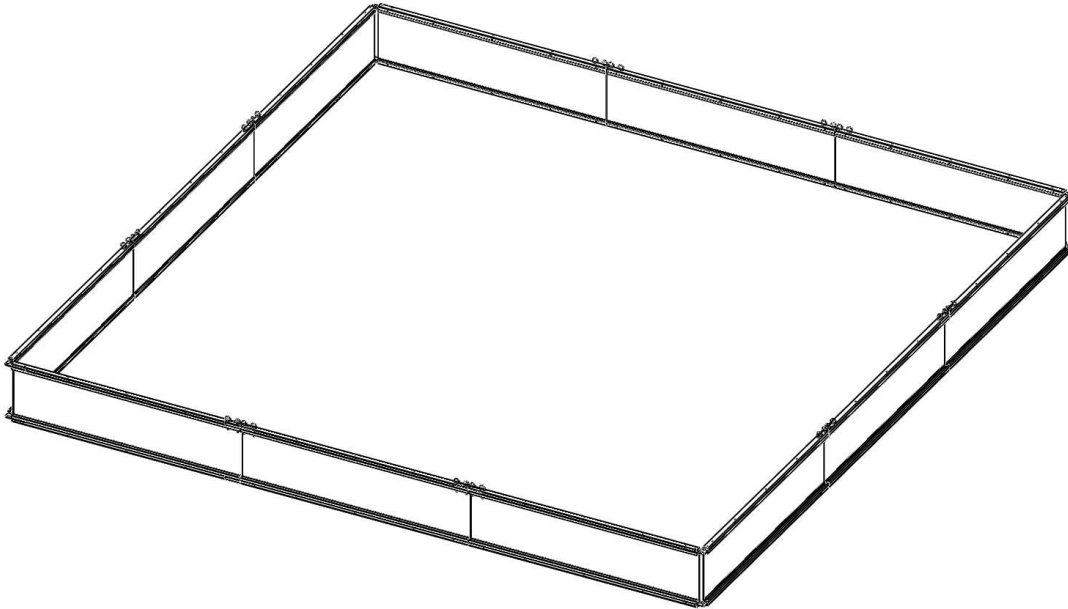

Step 6: Feed the strap through the clip and attach the clip to the bottom middle of the center panels on all four sides of the field.

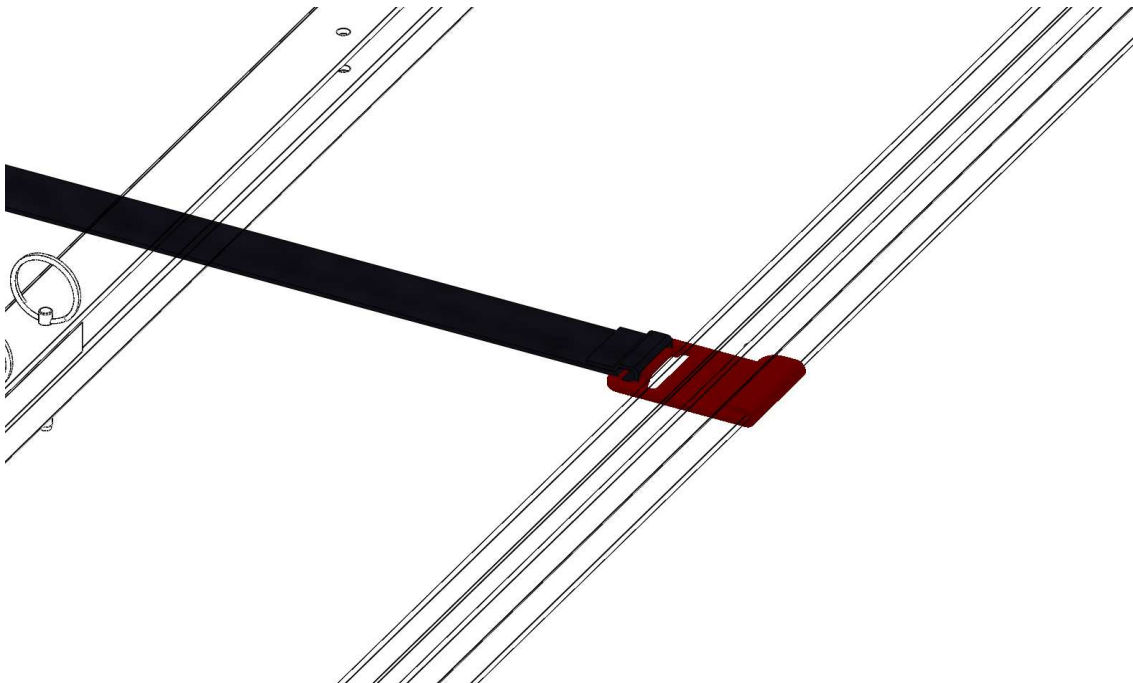

Step 7: Once the clips are attached to the panels pull the straps snug.

